



Step Systems

HD-18 Tube Step

- Installs w/exclusive CARR multi-mount brackets
- Dimension: 18" width
- 2" round tube, with a standard or extended reach application for lifted trucks
- Available in two finishes with exceptional corrosion resistance
- 304 polished stainless steel and XP3 black powder coat with an E-coat undercoat
- Unique design gives the vehicle a rugged off-road look, with a style like nothing else out there
- Rugged diamond tread pattern
- Rocker panel installation provides for the strongest and easiest installation of any step product



Hoop II Steps

- Compact 10" width • Sold in pairs
- Exclusive Multi-Mount System
- Available in three finishes
- Rugged tread pattern for safe and attractive non-slip surface
- Easy installation



Super Hoop Steps

- Compact 20" x 3" tubular design
- Sold in pairs • Easy installation
- Exclusive Multi-Mount System
- Available in three finishes
- Rugged tread pattern for safe and attractive non-slip surface



STEP APPLICATIONS	HD-18 - STANDARD		HD-18 - EXTENDED		HOOP II - PRS			SUPER HOOP - PRS		
	304 SS	XP3 BLK	304 SS	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK
CHEVY/GMC										
'02 - '12 Trail Blazer/Envoy	301800	301801	N/A	N/A	103992	103994	103991	124032	124034	124031
'02 - '12 Avalanche	N/A	N/A	301810	301811	103992	103994	103991	124032	124034	124031
'02 - '12 Escalade	N/A	N/A	301810	301811	N/A	N/A	N/A	N/A	N/A	N/A
'02 - '12 Denali Truck	N/A	N/A	301810	301811	103992	103994	103991	124032	124034	124031
'88 - '12 Sierra/Silverado 1500 C&K PU/FS	N/A	N/A	301810	301811	103992	103994	103991	124032	124034	124031
'01 - '12 *Sierra/Silverado 2500-5500 C&K PU/FS (HD)	N/A	N/A	301810	301811	103992	103994	103991	124032	124034	124031
'86 - '12 *2500-5500 Fullsize Crew Cab (All doors)	N/A	N/A	301810	301811	103992	103994	103991	124032	124034	124031
DODGE										
'09 - '12 Ram 1500 All Cabs/All Doors	N/A	N/A	301810	301811	105772	105774	105771	125772	125774	125771
'10 - '12 Ram 2500-5500 All Cabs/All Doors	N/A	N/A	301810	301811	105772	105774	105771	125772	125774	125771
'02 - '08 Ram 1500 All Cabs/All Doors	N/A	N/A	301810	301811	103992	103994	103991	124032	124034	124031
'03 - '09 Ram 2500-5500 All Cabs/All Doors	N/A	N/A	301810	301811	103992	103994	103991	124032	124034	124031
FORD										
'99 - '12 Super Duty All Cabs (All Doors)	301880	301881	N/A	N/A	104812	104814	104811	124872	124874	124871
'04 - '12 F-150 All Cabs (All Doors)	301800	301801	N/A	N/A	103992	103994	103991	124032	124034	124031
'98 - '12 Ranger 2-Door Only	301890	301891	N/A	N/A	104992	104994	104991	124992	124994	124991
'97 - '12 Expedition (All Doors)	301800	301801	N/A	N/A	103992	103994	103991	124032	124034	124031
NISSAN										
'04 - '12 Titan	N/A	N/A	301870	301871	N/A	N/A	N/A	N/A	N/A	N/A
'98 - '12 Frontier Reg cab	301800	301801	N/A	N/A	103992	103994	103991	124032	124034	124031
'02 - '12 Frontier Crew Cab (All doors)	301800	301801	N/A	N/A	103992	103994	103991	124032	124034	124031
'00 - '12 Xterra (Front doors)	301800	301801	N/A	N/A	103992	103994	103991	124032	124034	124031
'00 - '12 Xterra (Rear doors)	N/A	N/A	N/A	N/A	103992	103994	103991	N/A	N/A	N/A
TOYOTA										
'05 - '12 Tacoma Crew Cab (All Doors)	301840	301841	N/A	N/A	104502	104504	104501	124502	124504	124501
'05 - '12 Tacoma / Prerunner	301840	301841	N/A	N/A	104502	104504	104501	124502	124504	124501
'00 - '12 Tundra	301840	301841	N/A	N/A	104502	104504	104501	124502	124504	124501

* 11-12 Diesel GMC/Chevy 2500-5500 HD pickup trucks have an emissions tank under the passenger door that interferes with the mounting of our steps.

Work Truck Step

- 500 lb. weight capacity • Comes fully assembled
- Push button feature that deploys step (hands free) - auto only
- Large 12" or 24" non-skid step for increased safety
- Conveniently tucked away when not in use
- Interior steel straps for additional strength
- When in out position - both feet fit on the step • Easy to install and easy to use



Descriptions	Part No
Work Truck Step Manual 12" CS (Cast Step)	501001
Work Truck Step Auto 12" CS (Cast Step)	501010
Work Truck Step Auto 24" GSS (Grip Strut Step)	501020
Work Truck Step Auto 12" GSS (Grip Strut Step)	501030



carr.com • ctpdistributorsinc.com

Grande Prairie 1-800-803-7785

Edmonton 1-888-422-9329

Calgary 1-877-237-7660

Port Kells, Surrey 1-800-663-5356

ACCESSORIES

Light Bars & Wings



Light Bars

- Designed to securely mount to the roof gutter
- A variety of finishes available
- Lights sold separately
- Specially keyed bolts protect your investment!
- Can be mounted with internal gutters by using the stainless steel gutter mount kit (Sold separately)



Deluxe



Deluxe Rota



M Profile



Low Profile

LIGHT BAR APPLICATIONS	DELUXE LIGHT BAR			DELUXE ROTA BAR			M PROFILE LIGHT BAR			LOW PROFILE		GUTTER MOUNT KIT
	XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK	XP4 SLV	XP3 BLK	
CHEVY/GMC												
'04 - '12 Colorado/Canyon	210342	210344	210341	210872	210874	210871	210702	210704	210701	210504	210501	220052
'02 - '12 Trail Blazer/Envoy	210342	210344	210341	210872	210874	210871	210702	210704	210701	210504	210501	220542
'02 - '12 Avalanche	210342	210344	210341	210872	210874	210871	210702	210704	210701	210504	210501	220542
'02 - '12 Denali Truck	210342	210344	210341	210872	210874	210871	210702	210704	210701	210504	210501	220542
'00 - '12 Sierra/Silverado C&K PU/FS & HD	210342	210344	210341	210872	210874	210871	210702	210704	210701	210504	210501	220542
'00 - '12 Fullsize Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	210504	210501	220542
'00 - '12 Suburban/Yukon XL Tahoe/Yukon	210342	210344	210341	210872	210874	210871	210702	210704	210701	N/A	N/A	220542
DODGE												
'09 - '12 Ram 1500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	N/A	N/A	220042
'02 - '08 Ram 1500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	210504	210501	220542
'03 - '12 Ram 2500-5500 All Cabs/All Drs	210342	210344	210341	210872	210874	210871	210702	210704	210701	N/A	N/A	220542
'05 - '09 Durango	210342	210344	210341	210872	210874	210871	210702	210704	210701	N/A	N/A	220542
'05 - '12 Dakota	210342	210344	210341	210872	210874	210871	210702	210704	210701	N/A	N/A	220542
FORD												
'99 - '12 Super Duty All Cabs	210342	210344	210341	210872	210874	210871	210702	210704	210701	N/A	N/A	220052
'04 - '12 F-150	210342	210344	210341	210872	210874	210871	210702	210704	210701	N/A	N/A	220062
JEEP												
'05 - '12 Grand Cherokee	210342	210344	210341	210872	210874	210871	210702	210704	210701	210504	210501	220052
NISSAN												
'98 - '12 Frontier Reg cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	210504	210501	220052
'02 - '12 Frontier Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	210504	210501	220052
'00 - '12 Xterra - Without option roof rack	210342	210344	210341	210872	210874	210871	210702	210704	210701	210504	210501	220052
TOYOTA												
'05 - '12 Tacoma/Prerunner/Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	N/A	N/A	220042
'07 - '12 Tundra	210342	210344	210341	210872	210874	210871	210702	210704	210701	N/A	N/A	220042
'07 - '12 FJ Cruiser	210342	210344	210341	210872	210874	210871	210702	210704	210701	N/A	N/A	220042

Light Wing

- Solid mount with virtually no vibration
- Lights not included
- Universal design mounts to virtually any bumper
- Specially keyed bolt to protect your investment
- 35" wing span • Polished, Silver, Black, Chrome



Applications	XP4 SLV	XP3 BLK	XC3 CHR
Light Wing	167304	167301	167303

Clamp-on Tool Box Step

- Rugged frame mount design for strength and rigidity
- No-drill installation
- Sold in singles
- Locks under truck when not in use

	XM3 POL	XP4 SLV	XP3 BLK
'99 - '12 Super Duty Long Bed All Cabs	171002	171004	171001
'05 - '07 Super Duty Short Bed All Cabs	171002	171004	171001
'04 - '08 F-150 5.5-ft Bed Super Cab, Super Crew	172002	172004	172001



Light Bars & Steps



Jeep Windshield Mount

- Stylish design integrates well with the vehicle
- Constructed of heavy gauge steel
- Black powder coat finish
- No drilling or cutting required (XRS Rota only)
- Bar rotates down for clearance
- Easy to assemble
- Easy to install
- Made in the USA
- Limited lifetime warranty



These images features the XRS Rota Light Bars

APPLICATIONS		STANDARD BAR			ROTA BAR			XRS ROTA LIGHT BAR		
LIGHT BAR APPLICATIONS		XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK
		*Note: Fits factory holes								
'07 - '12	X/Sahara/Rubicon/JK Wrangler (XRS)	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	210221
'97 - '06	TJ Wrangler	210312	210314	210311	210332	210334	210331	N/A	N/A	210661
'76 - '95	CJ7/YJ Wrangler	210442	210444	210441	210912	210914	210911	N/A	N/A	210881

Jeep Cover-Up

- Aluminum "tall" corners for Jeeps & Toyota Land Cruisers
- Cover up the rusted or damaged corners of your vehicle with these rugged aluminum covers
- Available in Polished Aluminum or Black Powder Coat finish
- With or without cut-outs for lights & gas cap




APPLICATIONS	BRIGHT	XP3 BLK
Land Cruiser FJ 40 w/o cut outs	193212	193211
'76 - '85 CJ7 w/o cut outs	193362	193361
'98 - '02 TJ w/o cut outs	194532	194531
'98 - '02 TJ with cut outs	194552	194551

Universal Hitchstep

- Non-slip surface
- Fits all 2" receivers
- Requires standard pin & clip
- Folds up when not in use
- Provides easy access to back of vehicle

Application	Part #
Universal Hitch Step - Blank	180012
Universal Hitch Step - USA	180022
Universal Hitch Step - American Flag	180032
Universal Hitch Step - Horse	180042
Universal Hitch Step - My Toy	180052
Universal Hitch Step - Carr logo	180062
Universal Hitch Step - Eagle	180072
Universal Hitch Step - Checkered Flags	180082
Universal Hitch Step - Big Mouth Bass	180092
Universal Hitch Step - Christian Fish	180102
Universal Hitch Step - U.S. Army	180112
Universal Hitch Step - U.S. Navy	180122
Universal Hitch Step - U.S. Air Force	180132
Universal Hitch Step - U.S. Marines	180142

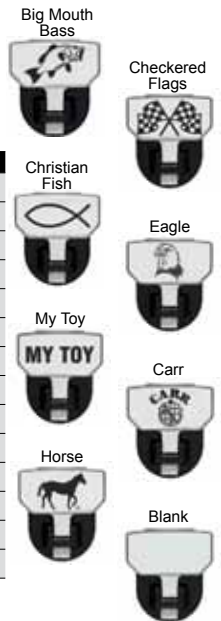

Front Tow Hook Steps

- Provide a great step where it's needed most
- All hardware included • Sold in singles
- Constructed of durable die-cast aluminum for long life
- Resist scratching and corrosion
- Installs and removes easily • Folds up when not in use
- No drill installation (clamp on) • Fits all 2" receivers



Application	Part #	Application	Part #	Application	Part #
'08 - '12 Super Duty All Cabs - Blank	151012	'08 - '12 Super Duty All Cabs - Carr Logo	151062	'08 - '12 Super Duty All Cabs - U.S. Army	151112
'00 - '07 Super Duty All Cabs - Blank	150012	'00 - '07 Super Duty All Cabs - Carr Logo	150062	'00 - '07 Super Duty All Cabs - U.S. Army	150112
'08 - '12 Super Duty All Cabs - USA	151022	'08 - '12 Super Duty All Cabs - Eagle	151072	'08 - '12 Super Duty All Cabs - U.S. Navy	151122
'00 - '07 Super Duty All Cabs - USA	150022	'00 - '07 Super Duty All Cabs - Eagle	150072	'00 - '07 Super Duty All Cabs - U.S. Navy	150122
'08 - '12 Super Duty All Cabs - American Flag	151032	'08 - '12 Super Duty All Cabs - Checkered Flags	151082	'08 - '12 Super Duty All Cabs - U.S. Air Force	151132
'00 - '07 Super Duty All Cabs - American Flag	150032	'00 - '07 Super Duty All Cabs - Checkered Flags	150082	'00 - '07 Super Duty All Cabs - U.S. Air Force	150132
'08 - '12 Super Duty All Cabs - Horse	151042	'08 - '12 Super Duty All Cabs - Big Mouth Bass	151092	'08 - '12 Super Duty All Cabs - U.S. Marines	151142
'00 - '07 Super Duty All Cabs - Horse	150042	'00 - '07 Super Duty All Cabs - Big Mouth Bass	150092	'00 - '07 Super Duty All Cabs - U.S. Marines	150142
'08 - '12 Super Duty All Cabs - My Toy	151052	'08 - '12 Super Duty All Cabs - Christian Fish	151102		
'00 - '07 Super Duty All Cabs - My Toy	150052	'00 - '07 Super Duty All Cabs - Christian Fish	150102		