



Custom Molded Floor, Cargo & Trunk Liners

All part numbers are five digits long with the last digit being the color code (i.e. 24101)
Add last digit color code to part numbers: 1=Black, 2=Grey, 3=Tan

• OVER 20 YEARS OF PROVEN PROTECTION AT KEEPING DEBRIS AND SPILLS OFF YOUR VEHICLE'S CARPET.

• THE ORIGINAL CUSTOM MOLDED FLOOR LINER WITH STA-PUT NIBS ON BACK TO HELP PREVENT SHIFTING.

• LIFETIME WARRANTY AGAINST CRACKING, BREAKING & MANUFACTURER DEFECTS.

• AVAILABLE IN BLACK, GREY, AND TAN TO COMPLIMENT ALL INTERIORS.

MAKE	YEAR	MODEL	FRONT LINER	HUMP LINER	2nd SEAT LINER	CARGO LINER
GM	WB	10-12 Cadillac SRX	9814		WB	2114
CHEVY/GMC	WB	08-12 Acadia (2nd row buckets/bhnd 3rd seat CL 2nd row bench/behind 2nd seat cargo liner)	3101_		6102_	2103_
		07-12 Avalanche	3141	8244	6243	2101_
WB	WB	10-11 Camaro	9812		WB	42051
		05-10 Cobalt 4-Door (Black/Grey Only)	9810		WB	42011
WB	WB	04-12 Colorado/Canyon Reg/Ext Cab (Black/Grey Only)	3250	8249	6250	
		04-12 Colorado/Canyon Crew Cab (Black/Grey Only)	3251		6251	
WB	WB	11-12 Cruze (Black Only) 42021 fits w/spare tire only	98161		WB	42021
		02-08 Envoy/Envoy Denali/Trailblazer	3200		6202	2200
WB	WB	10-12 Equinox/Terrain (Black/Grey Only)	9813		WB	2113
		08-12 Malibu	9811		WB	42001
WB	WB	99-06 Silverado/Sierra Ext Cab & 07 Classic	3130	8224	6136	
		04-06 Silverado/Sierra HD Series Crew Cab & 07 Classic	3130	8224	6146	
WB	WB	04-06 Silverado/Sierra 1500 Crew Cab & 07 Classic	3130	8224	6147	
		07-12 Silverado/Sierra & HD Series Reg Cab	3135	8222		
WB	WB	07-12 Silverado/Sierra Reg Cab (Fronts-Black/Grey)	1822			
		07-12 Silverado/Sierra & HD Series Ext Cab	3141	8223	6137	
WB	WB	07-12 Silverado/Sierra Ext Cab	9821	8228	WB	
		07-12 Silverado/Sierra/HD Series Crew Cab	3141	8223	6152	
WB	WB	07-12 Silverado/Sierra Crew Cab	9820	8228	WB	
		07-12 Suburban/YukonXL&Denali (w/3rd seat)	3141	8244	6243	2143
WB	WB	07-12 Suburban/YukonXL&Denali (w/o 3rd seat)	3141	8244	6243	2144
		07-12 Tahoe/Yukon/Yukon Denali (w/3rd seat opt)	3141	8244	6142	2141
WB	WB	07-12 Tahoe/Yukon/Yukon Denali (w/o 3rd seat opt)	3141	8244	6142	2142
		08-10 Tahoe/Yukon Hybrid (6153/2153 Black Only)	3141		61531	21531
WB	WB	09-12 Traverse (2nd row buckets/bhnd 3rd seat CL 2nd row bench/behind 2nd seat cargo liner)	3101_		6102_	2106_
			3101		6103_	2104_
DODGE	WB	11-12 300/Charger AWD (9808 Black/Tan Only)	9808		WB	40031
		11-12 300/Charger RWD (9806 Black/Tan Only)	9806		WB	40031
WB	WB	08-10 Challenger (9802 Black/Tan Only)	9802		WB	40021
		2011 Challenger (Black/Tan Only)	9807		WB	40021
RAM	WB	05-11 Dakota Quad Cab (Black/Grey Only)	3035		6036	
		2011 Durango (Cargo Liner behind 2nd seat)	9805		WB	2042
WB	WB	02-08 Ram 1500 & 03-09 HD Series CHL-A/T	3080	8280	6080	
		02-08 Ram Quad Cab 1500 & 03-09 HD Series	9803		WB	
RAM	WB	02-12 Ram Reg/Quad Cab (Fronts Only)	1801			
RAM	WB	09-12 Ram Crew Cab 1500 & 10-12 HD Series	3082	8282	6082	
RAM	WB	09-12 Ram Crew Cab 1500 & 10-12 HD Series	9800	8370	WB	
RAM	WB	09-12 Ram Reg/Quad 1500 & 10-12 HD Reg Cab	3083	8280	6083	
RAM	WB	09-12 Ram Quad Cab 1500	9801	8371	WB	
WB	WB	06-09 Ram Mega Cab (29941 fits over 2nd seat)	3080		6085	29941
		10-12 Ram Mega Cab (29941 fits over 2nd seat)	3082	8282	6086	29941
RAM	WB	10-12 Ram Mega Cab 2500/3500 Series	9804		WB	
FORD/MERC/MAZDA	WB	2008 Escape/Tribute/Mariner	3317		6317	2316
		2008 Escape/Mariner Hybrid	3317		6317	2314
WB	WB	09-12 Escape/Tribute/Mariner	9835		WB	2322
		09-12 Escape/Tribute/Mariner Hybrid	9835		WB	2323
WB	WB	07-12 Expedition (CL fits to back of 2nd seat) 3rd seat liner/crg liner behind 3rd seat	3353_		6353_	2357_
					7353_	2355_
WB	WB	07-12 Expedition EL (CL to back of 2nd seat) 3rd seat liner/crg liner behind 3rd seat	3353_		6353_	2354_
					7353_	2353_
WB	WB	06-10 Explorer/Mountaineer	3375		6377	2375
		11-12 Explorer w/o 2nd row console, behind 2nd seat cargo (3rd seat liner/behind 3rd seat cargo) Black/Grey Only	9876_		WB	2378_
WB	WB	04-08 F150 Reg Cab	3365	8366		2379
		04-08 F150 Super Cab	3365	8365	6367	
WB	WB	04-08 F150 Super Crew	3365	8365	6368	
		09-12 F150 Reg/Super Cab	3369		6361	
WB	WB	09-12 F150 Reg/Super Cab/Super Crew (Fronts)	1833	8342		
		09-12 F150 Super Cab	9834	8342	WB	
WB	WB	09-12 F150 Super Crew	3369		6369	
		09-12 F150 Super Crew	9833	8342	WB	
WB	WB	09-12 F150 (2nd Seat Only) Super Crew			1933	
		08-10 F250-450 Super Duty Reg Cab	3388	8247		
WB	WB	08-10 F250-450 Super Duty Super Cab	3388	8248	6388	
		08-10 F250-450 Super Duty Reg/Sup/Crew Cab (Fronts)	1838			
WB	WB	08-10 F250-450 Super Duty Super Cab w/o man transfer case	9839	8338	WB	
		08-10 F250-450 Super Duty Crew Cab	3388	8248	6382	
WB	WB	08-10 F250-450 Super Duty Crew Cab w/o man transfer case	9838	8338	WB	



CLASSIC FRONT SEAT



WEATHERBEATER BACK SEAT

WB = WeatherBeater Design; Front/2nd seat sold together, trunk liners available in Black Only

huskyliners.com • ctpdistributorsinc.com

Grande Prairie 1-800-803-7785

Edmonton 1-888-422-9329

Calgary 1-877-237-7660

Port Kells, Surrey 1-800-663-5356

ACCESSORIES



Front to Back Protection made to last a lifetime

All part numbers are five digits long with the last digit being the color code (i.e. 24101)
Add last digit color code to part numbers: 1=Black, 2=Grey, 3=Tan



WEATHERBEATER FRONT SEAT



CLASSIC CENTER HUMP



WEATHERBEATER FRONT SEAT



CLASSIC CARGO LINER

MAKE	YEAR	MODEL	FRONT LINER	HUMP LINER	2nd SEAT LINER	CARGO LINER	
FORD	11-12	F250-450 Super Duty Reg Cab	3387	8368			
	WB	11-12	F250-450 Super Duty Reg Cab (Fronts Only)	1871	8368		
		11-12	F250-450 Super Duty Super Cab	3389	8367	6384	
	WB	11-12	F250-450 Super Duty Super Cab	9872	8367	WB	
		11-12	F250-450 Super Duty Crew Cab	3389	8367	6383	
	WB	11-12	F250-450 Super Duty Crew Cab	9871	8367	WB	
	WB	11-12	Fiesta (Black Only)	98751		WB	
	WB	09-12	Flex (Cargo Liner behind 2nd seat in Black)	9874		WB	
	WB	09-12	Flex (Cargo Liner behind 3rd seat)	9874		WB	
	WB	08-11	Focus (43001 will not fit w/OEM subwoofer)	9831		WB	
	WB	2012	Focus 4Dr (5Dr Trunk Liner - 43051)	9877		WB	
	WB	06-09	Fusion/Milan FWD 43011-w/o OEM subwoofer	9830		WB	
	WB	10-12	Fusion/Milan Hybrid	9836		WB	
	WB	10-12	Mustang (43031-won't fit convertibles)	9837		WB	
		05-11	Ranger/Mazda 4dr (Black/Grey Only)	3374		6373	
		05-11	Ranger/Mazda 2dr (Black/Grey Only)	3374		N/A	
	WB	10-12	Taurus	9870		WB	
		08-09	Taurus X (Cargo Liner-behind 3rd seat)	3312		6311	
		WB	10-11	Transit Connect (Black/Grey) Fronts Only	1875		
	HONDA	WB	08-12	Accord 4-Door	9840		WB
WB		06-11	Civic 4-Door (44011 won't fit Hybrid)	9841		WB	
WB		2012	Civic 4-Door	9844		WB	
WB		09-12	Pilot	9842		WB	
HYUNDAI	WB	10-12	Santa Fe	9880		WB	
JEEP		05-10	Grand Cherokee	3061		6061	
	WB	11-12	Grand Cherokee	9805		WB	
		07-10	Wrangler (Black/Grey Only)	3052		6052	
		07-10	Wrangler Unlimited (Black/Grey Only)	3052		6053	
		11-12	Wrangler (Black/Grey Only)	3052		6054	
		11-12	Wrangler Unlimited (Black/Grey Only)	3052		6055	
KIA	WB	11-12	Sorento (w/auto trans/CL-opt 3rd seat folded flat)	9881		WB	
LEXUS	WB	10-11	GX 460	9857		WB	
	WB	10-11	RX 350/RX 450H	9855		WB	
LINCOLN	WB	09-12	MKS (Black/Tan Only)	9873		WB	
	WB	10-12	MKT (Cargo Liner behind 3rd seat)	9874		WB	
	WB	10-12	MKT (Cargo Liner behind 2nd seat in Black)				
	WB	07-09	MKZ-Front Wheel Drive	9830		WB	
NISSAN	WB	10-12	MKZ FWD	9836		WB	
		07-12	Altima 4-Door	9860		WB	
		05-12	Frontier Crew Cab P/U	3636		6629	
		05-12	Pathfinder	3625		6625	
		04-12	Titan Ext Cab Truck (6661 Black/Grey Only)	3661	82651	6661	
		04-12	Titan Crew Cab Truck (6661 Black/Grey Only)	3661	82651	6665	
	WB	10-12	Outback/Legacy (Black/Tan Only)	9884		WB	
SUBARU TOYOTA	WB	03-09	4Runner w/o double stack cargo tray	3575		6575	
		03-09	4Runner w/double stack cargo tray	3575		6575	
		04-09	4Runner w/3rd seat (2571 Grey Only)	3575		6575	
	WB	10-12	4Runner with optional sliding cargo deck	9857		WB	
	WB	10-12	4Runner w/o opt sliding cargo deck/3rd row seat	9857		WB	
	WB	10-12	4Runner with 3rd row seat	9857		WB	
	WB	07-11	Camry	9851		WB	
	WB	2012	Camry	9890		WB	
		07-10	FJ Cruiser w/auto only (Black Only)	35961		65961	
		11-12	FJ Cruiser w/auto only (Black Only)	35931		65961	
	WB	04-09	Prius (Black/Tan Only)	9852		WB	
	WB	10-11	Prius	9856		WB	
		08-09	Sequoia (3rd seat liner-7557)	3558		6557	
		10-11	Sequoia (3rd seat liner-7557)	3559		6557	
		2012	Sequoia (3rd seat liner-7557)	3557		6557	
	09-12	Tacoma Access Cab	3547		6546		
	05-08	Tacoma Reg/Acc Cab (2nd seat Cargo Liner)	3547		6548		
	05-12	Tacoma Double Cab Truck	3547		6549		
	07-09	Tundra CrewMax (Dbl Cab w/underseat strg)	3558	8258	6559		
	07-09	Tundra Reg/Dbl Cab w/o underseat strg box	3558	8258	6558		
	10-12	Tundra CrewMax (w/underseat storage)	3557	8258	6559		
WB	10-12	Tundra CrewMax/Double Cab	9858		WB		
	10-12	Tundra Reg/Dbl Cab w/o underseat strg box	3557	8258	6558		
WB	10-12	Tundra Reg Cab (Fronts Only in Black/Grey)	1858				
WB	09-11	Venza	9854		WB		
VW	WB	11-12	Jetta (Black/Tan Only)	9883		WB	



Heavy Duty Floor Mats

All part numbers are five digits long with the last digit being the color code (i.e. 51181)
 Add last digit color code to part numbers: 1=Black, 2=Grey, 3=Tan

- 3/8" HIGH RIDGES ARE UP TO 40% TALLER.
- FEATURES EXTRA THICK DRIVER'S HEEL PAD FOR LONGER LIFE.

FRONT FLOOR MATS



MAKE	YEAR	MODEL	FRONT MAT	CENTER HUMP	2nd SEAT MAT	
CHEVY/GMC	2007-12	ACADIA/TRVERSE - THIRD SEAT FLOOR MAT	5114_	N/A	5201_	
	2004-12	COLORADO/CANYON	5112	5300 *	5202	
	2005-09	EQUINOX	5111	N/A	5202	
	2007-12	HD SERIES	5118	N/A	5203	
	2007-12	SILVERADO/SIERRA	5118	N/A	5203	
	2007-12	SUBURBAN/AVALANCHE/YUKON/ YUKON DENALI/YUKON XL/YUKON XL DENALI	5118_	N/A	5202_	
	2007-12	TAHOE	5118	N/A	5202	
	2002-09	TRAILBLAZER/EXT & ENVOY/XL (3rd SEAT - 5202)	5113	N/A	5202	
	2005-11	DAKOTA QUAD CAB	5112	N/A	5202	
	2004-09	DURANGO/ASPEN	5123	N/A	5202	
DODGE	2002-12	RAM 1500/2500/3500 SERIES	5122	5300 *	5202	
	2006-12	RAM MEGA CAB - FULL SIZE	5122	N/A	5202	
	2007-12	EDGE	5105	N/A	5202	
	2001-08	ESCAPE	5105	N/A	5202	
	2003-12	EXPEDITION/EXPEDITION EL - THIRD SEAT FLOOR MAT	5123_	5300_*	5201_	
	2002-10	EXPLORER	5112	5300 *	5202	
	2007-10	EXPLORER SPORT TRAC	5112	N/A	5202	
	2004-08	F-150	5123	5300 *	5201	
	2009-12	F-150 REG/SUPER CAB	5123	5300 *	5202	
	2009-12	F-150 SUPER CREW	5123	5300 *	5201	
FORD	99-2007	F250-550 SUPER DUTY	5104	5300 *	5201	
	2008-10	F250-450 SUPER DUTY	5120	5300 *	5201	
	UP TO 11	RANGER	5107	N/A	5202	
	2003-09	4RUNNER	5111	N/A	5202	
	2001-07	HIGHLANDER/HYBRID	5117	N/A	5202	
	2005-07	LAND CRUISER	5111	N/A	5202	
	2006-11	RAV4	5111	N/A	5202	
	UP TO 12	TACOMA	5111	N/A	5202	
	TOYOTA	2003-09	4RUNNER	5111	N/A	5202
		2001-07	HIGHLANDER/HYBRID	5117	N/A	5202

X-act CONTOUR™

Husky Liners® X-act Contour™ series floor liners offer a flexible soft feel with a factory finish look. Protect your vehicle's carpet from snow, water, spills and basically every-day life. Designed to fit the complex contours of your vehicle's floorboard... exactly.

Go Ahead Get Dirty we've got you covered.

YEAR	APPLICATION	Front Liner	2nd Seat
2007-12	Cadillac Escalade/Escalade ESV/Escalade EXT	53101	53201
2007-12	Chevrolet Avalanche	53101	53201
2007-12	Chevrolet Silverado Crew/Ext Cab	53101	53201
2007-12	Chevrolet Suburban	53101	53201
2007-12	Chevrolet Tahoe	53101	53201
2009-12	Dodge Ram 1500 Series Crew Cab	53501	53601*
2010-12	Dodge Ram 2500/3500 Series Crew Cab	53501	53601*
2010-12	Dodge Ram 2500/3500 Series Mega Cab	53501	
2009-12	Ford F-150 Reg/Super Cab	53311	
2009-12	Ford F-150 Super Crew	53311	53411*
2011-12	Ford F-250-450 Super Duty Crew Cab	53301	53401*
2011-12	Ford F-250-450 Super Duty Super Cab	53301	
2007-12	GMC Sierra	53101	53201
2007-12	GMC Yukon/Yukon XL/Yukon XL Denali	53101	53201

All part numbers are five digits long with the last digit being the color code (i.e. 53101)
 Add last digit color code to part numbers: 1=Black; * = Call for Availability



ACCESSORIES

huskyliners.com • ctpdistributorsinc.com



HUSKY GEARBOX

VEHICLE INTERIOR STORAGE SYSTEMS

- ORGANIZE & STORE LOOSE ITEMS OUT OF SIGHT
- LARGE CAPACITY WITH REMOVABLE DIVIDERS
- FITS SPECIFICALLY UNDER SECOND SEAT
- NOISE REDUCING IMPACT RESISTANT SURFACE
- BLACK TEXTURED FINISH FOR A FACTORY LOOK



07-12 GM PICKUP EXT CAB
PART #09011



02-12 RAM QUAD CAB
PART #09401



09-12 F150 SUPER CREW
PART #09241



MAKE	YEAR	MODEL	PART #
CADILLAC	2007-12	ESCALADE EXT	09271
CHEVY/GMC	2007-12	AVALANCHE	09271
	99-2006	SILVERADO/SIERRA EXT CAB & 07 CLASSIC	09021
	2007-12	SILVERADO/SIERRA CREW CAB	09001
	2007-12	SILVERADO/SIERRA EXT CAB	09011
	2002-12	RAM QUAD CAB W/O OPTIONAL FOLDING FLAT LOAD FLOOR	09401
DODGE	2004-08	F150 SUPER CAB/CREW W/O UNDERSEAT SUBWOOFER	09201
	2009-12	F150 SUPER CAB WITHOUT SUBWOOFER	09261
	2009-12	F150 SUPER CREW WITHOUT REAR SUBWOOFER	09241
	2009-12	F150 SUPER CREW WITH REAR SUBWOOFER	09251
	99-2010	F250-550 REG CAB	09221
	2000-07	F250-550 CREW CAB WITH FULL REAR BENCH SEAT	09221
	2000-12	F250-550 SUPER CAB (INSTALLS UNDER REAR SEAT)	09211
	2005-10	F250-550 CREW CAB WITH 60/40 SPLIT REAR BENCH SEAT	09231
	2007-12	TUNDRA DOUBLE CAB WITHOUT OEM SUBWOOFER	09501
TOYOTA	2007-12	TUNDRA DOUBLE CAB WITHOUT OEM SUBWOOFER	09501

MAKE	YEAR	MODEL	PART #
Chevy/GMC	07-12	Silverado/Sierra & HD Series (New Body Style)	15240
	99-06	Silverado/Sierra (F/S) & HD Series (07 Classic)	15230
Dodge	10-12	RAM 2500/3500 Series	15340
	09-12	RAM 1500 Series	15340
	03-09	RAM 2500/3500 Series	15330
	02-08	RAM 1500 Series	15330
	94-02	RAM (2500/3500 Series Old Body Style)	15320
	94-01	RAM (1500 Series Old Body Style)	15320
	09-12	F-150	15160
Ford	04-08	F-150 Includes F-150 Super Crew	15150
	97-03	F-150 Series & Lt Duty F250 & 04 Heritage Edition Does Not fit Super Crew	15130
	99-12	F-250 HD & F-350 Super Duty	15130
	08-12	F-450 Super Duty with OEM truck box	15130

- CENTER PULL HANDLE IS LOCKABLE. USES FACTORY HINGE AND LATCH POINTS, EASY TO INSTALL.
- DESIGN IS FUNCTIONAL AND STYLISH.

Aluminum ACCESSORIES



5TH WHEEL TAILGATE

- HEAVY DUTY LOUVERED DESIGN REDUCES WIND RESISTANCE.
- HALF THE WEIGHT OF MOST FACTORY TAILGATES.

huskyliners.com • ctpdistributorsinc.com



Custom Molded Mud Guards

- PROVIDES ENHANCED STYLING AND HELPS PREVENT DAMAGE TO YOUR VEHICLE AND THE VEHICLES AROUND YOU.
- KEEP MUD, SNOW AND ICE OFF YOUR RUNNING BOARDS.
- ENGINEERED TO PERFECTLY CONTOUR FENDERS AND BODY PANELS PROVIDING A CUSTOM FIT FOR EVERY VEHICLE.
- MANUFACTURED FROM A DURABLE IMPACT RESISTANT THERMOPLASTIC TO ENSURE THE MUD GUARD WILL LAST FOR THE LIFE OF YOUR VEHICLE.

FRONT & REAR MGS



DUALY MUD GUARDS




MAKE	YEAR	MODEL	FRONT	REAR	
Cadillac	07-12	Escalade w/o pwr assist steps & w/o flare	56731	57781	
	07-12	Escalade ESV w/o pwr assist steps & w/o flares	56731	56781	
	07-12	Escalade EXT w/o pwr assist steps & w/o flares	56731	56761	
Chevy/GMC	07-12	Avalanche w/o pwr assist steps & w/o flares	56731	56761	
	07-12	Avalanche Z-71 w/OEM lrg flares/lower body cladding	56821	56831	
	04-12	Colorado/Canyon w/o flares	56701	57701	
	04-12	Colorado/Canyon w/OEM mini flares	56721	57721	
	04-12	Colorado/Canyon w/OEM large flares	56811	56811	
	02-09	Envoy/Envoy XL/Envoy XUV	56341	57341	
	10-12	Equinox	56861	57861	
	05-09	Equinox	56391	57391	
	07-12	Silverado/Silverado HD (new body style) w/o flares	56791	57791	
	(Rear Dually)	07-12	Silverado HD Series (new body style)	56791	57841
(Rear Dually)	07-12	Sierra/Sierra Denali (new body) w/o flares	56801	57801	
	07-12	Sierra HD Series (new body style)	56801	57841	
(Rear Dually)	99-06	Silverado/Sierra & 07 Classic without flares	56251	57241	
		Sportside/Stepside	56251	57261	
	99-06	Silverado/Sierra & 07 Classic w/OEM flares	56211	57211	
	01-06	Silverado/Sierra/HD Series & 07 Classic	56211	57351	
	07-12	Suburban/Yukon XL without flares	56731	57761	
	07-12	Suburban Z-71 w/OEM lrg flares/lower body cladding	56821	57821	
	09-12	Suburban LTZ without power assist steps	56731	56781	
	00-06	Suburban/Yukon XL & Tahoe Yukon w/o flares with OEM flares	56251	57241	
			56211	57211	
	07-12	Tahoe/Yukon without flares	56731	57731	
07-12	Tahoe Z-71 w/OEM lrg flares/lower body cladding	56821	57831		
09-12	Tahoe LTZ without power assist steps	56731	57781		
06-09	Trailblazer LT	56741	57741		
07-12	Yukon Denali w/o pwr assist steps & w/o flares	56731	57781		
07-12	Yukon XL Denali w/o pwr assist steps & w/o flares	56731	56781		
Chrysler	07-09	Aspen	56131	57131	
	05-11	Dakota (not TRX package)	56091	57091	
	11-12	Durango	58001	59001	
	07-09	Durango	56131	57131	
	10-12	RAM 2500/3500 w/o flares	56171	57151	
Ram	10-12	RAM 2500/3500 w/OEM flares	56181	57161	
(Rear Dually)	10-12	RAM Truck Full Size w/o flares	56171	57181	
(Rear Dually)	10-12	RAM Truck Full Size w/OEM flares	56181	57191	
Ram	09-12	RAM 1500 w/o flares	56171	57151	
Ram	09-12	RAM 1500 w/OEM flares	56181	57161	
(Rear Dually)	06-09	RAM Mega Cab Truck Full Size	56071	57121	
(Rear Dually)	03-09	RAM 2500/3500 & 02-08 1500 Series Truck	56071	57061	
	03-09	RAM Truck Full Size	56071	57071	
	94-01	RAM 1500 & 94-02 2500/3500 Series	56001	56001	
Ford	08-12	Escape/Mariner with integrated side steps	56661	57661	
	08-12	Escape/Mariner without integrated side steps	56671	57661	
	07-12	Expedition won't work w/4x4 Off Road Pkg/pwr assist, color keyed run. boards	56631	57631	
	07-12	Expedition EL fits OEM run. boards, doesn't fit pwr assist, color key run boards	56651	57651	
	06-10	Explorer (except XLS) w/o power running boards	56611	57611	
	11-12	Explorer	58401	59401	
	07-10	Explorer Sport Trac	56621	57621	
	04-12	F-150 PU Flareside/Styleside & 06-08 Lincoln Mark LT - w/OEM flares & OEM running boards	56591	57591	
	04-12	F-150 PU w/o flares & w/o running boards	56601	57601	
	04-12	F-150 PU w/o flares & w/OEM run. boards	56591	57601	
	97-03	F-150 PU & 04 Heritage Edition w/OEM flares	56411	57411	
	99-10	F-250-350 Super Duty PU with OEM flares	56511	57581	
	08-10	F-250-350 Super Duty PU w/o flares	56641	57401	
	11-12	F-250-350 Super Duty PU with OEM flares	56691	57691	
	11-12	F-250-350 Super Duty PU w/o flares	56681	57681	
	(Rear Dually)	99-10	F-250-350 Super Duty PU with OEM flares	56511	57451
	(Rear Dually)	08-10	F-250-350 Super Duty PU w/o flares	56641	57451
(Rear Dually)	11-12	F-350 Super Duty PU	56681	57641	
(Rear Dually)	11-12	F-450 Super Duty PU	OEM	57641	
Jeep	11-12	Grand Cherokee	58101	59101	
	05-10	Grand Cherokee w/Hemi 5.7L	56101	57111	
	05-10	Grand Cherokee w/o Hemi 5.7L	56101	57101	
	07-12	Wrangler/Wrangler Unlimited	56141	57141	
Toyota	10-11	4Runner	56921	57921	
	05-12	Tacoma	56931	57931	
	07-12	Tundra	56911	57911	
Universal	ALL	Large Size (Guard is: 11-11.75" x 17.63")	56331	56331	
	ALL	Medium Size (Guard is: 9-9.75" x 15.75")	56261	56261	



HUSKY SHIELD® HEADLITE GUARD

REVOLUTIONARY HEADLIGHT PROTECTION

Protecting Vehicles for Over 20 Years

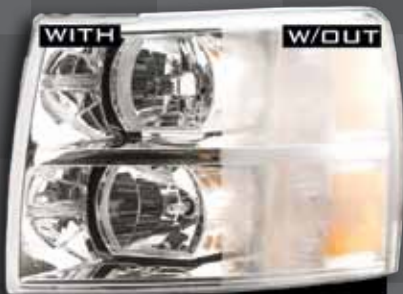

Half of this headlight was protected with Husky Shield® Headlite Guard and sand blasted at a distance of 12'

- GREAT, LONG-LASTING PROTECTION FOR YOUR HEADLIGHTS.
- EASY TO INSTALL, DESIGNED SPECIFICALLY FOR THE DO-IT-YOURSELFER.
- PRE-CUT TO FIT YOUR SPECIFIC VEHICLE, NO TRIMMING NECESSARY.
- BUILT-IN UV INHIBITORS HELP YOUR HEADLIGHTS REMAIN CLEAR BY MINIMIZING THE OXIDATION CAUSED BY UV SUNLIGHT.
- USEFUL ON ALL VEHICLES – NOT JUST NEW. PERFECT FOR APPLYING AFTER A HEADLIGHT RESTORATION OR POLISHING KIT.
- EASY TO FOLLOW INSTALLATION INSTRUCTIONS.



HUSKY Quad Caps

Truck Bed Rail Protection

- Patent Pending 4-piece, “hidden-seam” design.
- OEM styling – compliments your vehicle with factory matched design.
- Easy to install- 3M™ foam tape on back of caps.
- Durable protection.

Husky Liners® trusted protection is now available for Chevrolet Silverado and GMC Sierra truck bed rails with Husky Quad Caps™. Each truck bed rail is protected by a 2-piece cap; once installed the seam is completely hidden by the cap's unique styling. The unique 4-piece design means smaller packing, easier to handle cartons, more space in your warehouse or showroom, less shipping cost and unnecessary transportation damage. The durable Husky Quad Caps™ material offers superior protection and is backed by our lifetime guarantee against cracking and breaking.

The seam is designed into the pattern and is hidden once installed



MAKE	YEAR	MODEL/Approximate Bed Length	PART #
Chevrolet	07-12	Silverado & HD Series – Standard Bed (6.6')	97101
	07-12	Silverado – Short Bed (5.8')	97111

huskyliners.com • ctpdistributorsinc.com

ACCESSORIES